


Patching small holes or minor rips



Patching small holes or minor rips in the cotton/polyester fabric using Fabric adhesive and a patch - without you even having to take down the Nordic tipi.

Repair an up to 200 mm damage (in any direction) using a patch. There are repair patches included in the tent's packing bag when buying an Adventure Nordic tipi.

Cut a patch in the fabric matching the tent fabric, the patch should be at least 2 cm larger than the diameter of the hole or the measurements of the rip. Round off the corners. Mark the size of the patch on the inside of the tent fabric. Take glue on the tent fabric and on the patch and spread it out all over the surface.

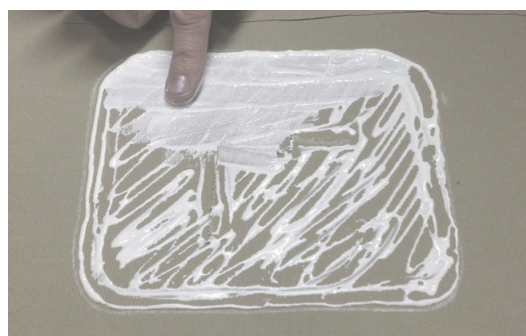


Patching small holes or minor rips



Let the glue dry so that it is non-stick and then place the patch on the tent fabric and press it. Apply pressure from the centre out. Some adhesive should ooze out around the edges; this will ensure that the adhesive will fix all the way out. Pass your finger along the edges, making sure all edge fibres are coated with adhesive.

For preference, let the repaired area dry under pressure.

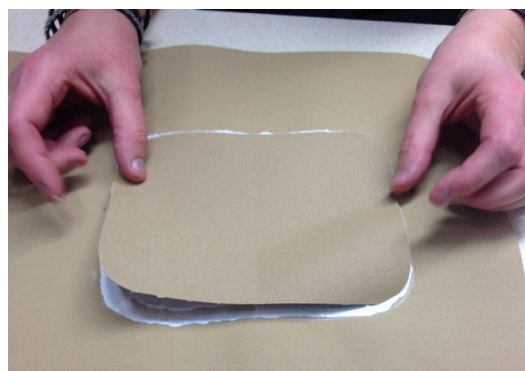

Repair minor holes or tears on lightweight fabrics using Seam grip+SIL silicone.

Apply a small amount of silicone both from the outside and inside so that the hole or tear is covered. Seam grip+SIL also seals seams when the entire tent does not need to be re-impregnated, which is usually not necessary.

