



Attach the porch's Velcro strip to the Nordic tipi's accessory sleeve. Push the Velcro strips firmly all the way to the edges.



Extend the band* at the corner of the porch and attach it to the Nordic tipi's storm cord fastenings ...



... by pushing the toggle through the hole and locking it with the ring. Likewise on the other side.



Assemble the pole and push it into its channel.



*On size 7, the band at the corner is only attached to one storm cord fastening.



Place the ends of the pole into their respective pole pockets. Adjust the strap.



Adjust the tent peg catch strap to the desired length and peg the porch to the ground at both ends of the pole. Use the measuring cord to get the correct distance between the pegs.



Extend the porch, fix it to the ground and position the storm cords. Tighten straps and storm cords. Pegs and straps may need to be adjusted so the porch fits snugly against the Nordic tipi.





Attach the strap on the inner wall of the porch to the storm cord fastening beside the door. Do the same with the other strap.



Adjust the bands which connect the porch to the storm cord fastenings on the outside.



Stretch the cord at the top, making a ridge so that rain water cannot collect there.



Take off the front of the porch if you only want it as a roof over the door.



The porch is not intended to resist strong winds and snow. The exceptional storm resistance of a Tentipi® Nordic tipi is maintained by the porch being designed so that it can easily be removed in bad weather.