


Pitching your Nordic tipi



- * Packing bag
- * Canvas
- * Central pole
- * Tent pegs
- * Mounting cross
- * Measuring tape

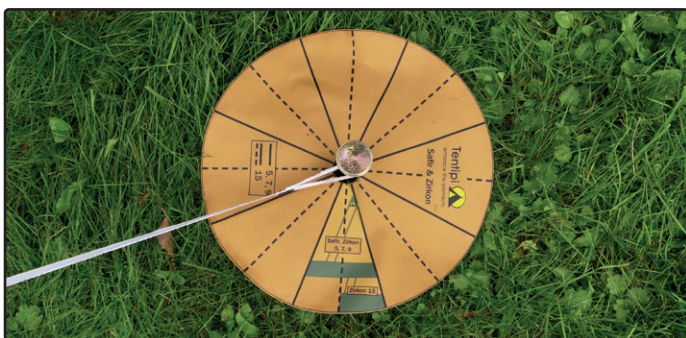

Use a tent peg to pin down the mounting cross where the centre of the Nordic tipi is to be. Place the door section (on the mounting cross) in the direction where you want the door of the Nordic tipi to be.



Pull out the measuring tape and put a tent peg by the marking. Use the mounting cross and the measuring tape to position eight tent pegs in a circle.



Spread the Nordic tipi out and pull the ground rings over the tent pegs. Push the pegs all the way down. Read also "Peg and stake guide" at tentipi.com/support.



Assemble the central pole. Locate the cap at the top of the Nordic tipi and put the central pole inside it.



Raise the Nordic tipi by pushing the central pole upwards. Place the central pole in the centre of the tent.



Close the door and tighten the ground straps all the way round. Adjust them till you are satisfied.